



Glue these bricks together, using a 135° lath (picture) ...

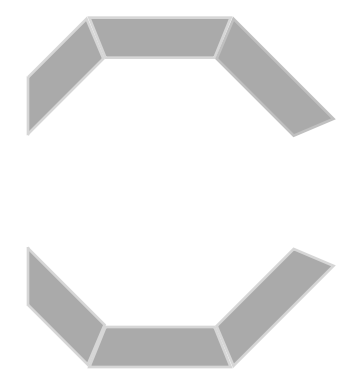


First cut two bricks the same height as the port,

then grind them in an angle of 45°.


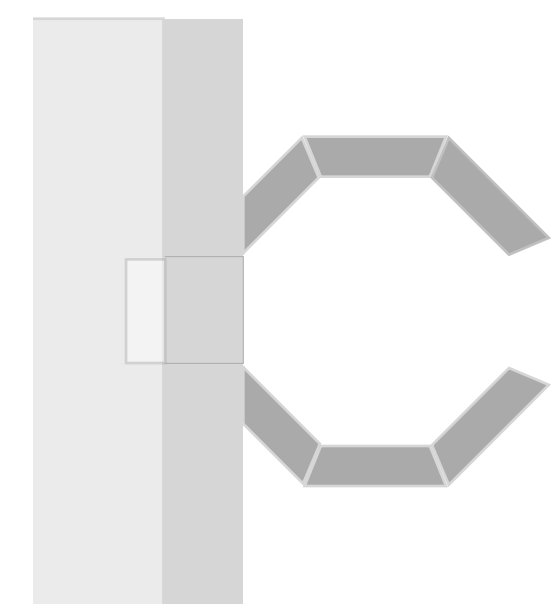


... then glue them on the bottom and onto the port bricks ...


... then glue the heel.

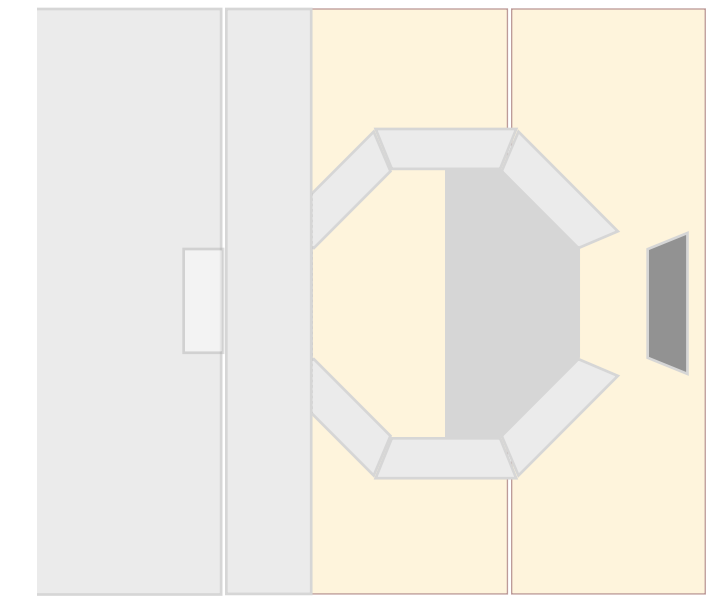

Finally, glue in the back riser brick...

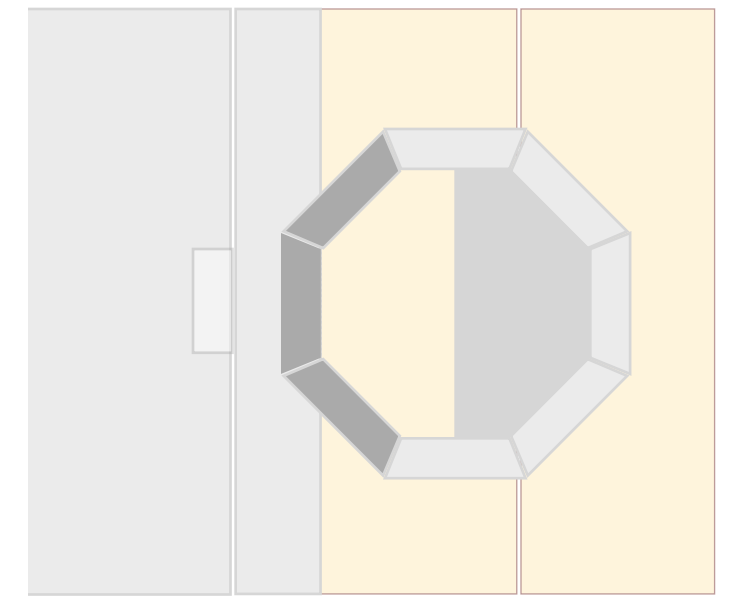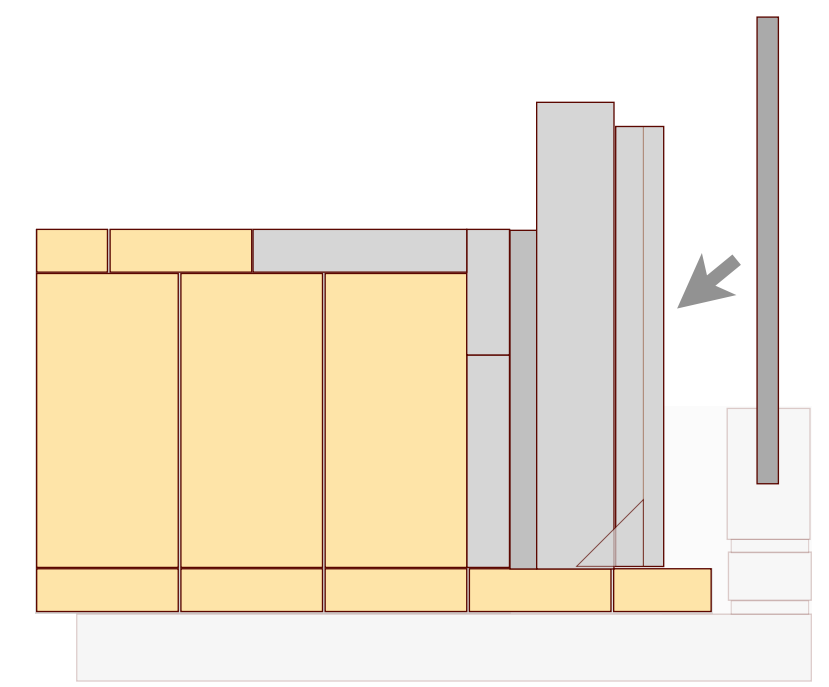

... and the 3 front bricks (glue joint at the bottom is 1 mm)

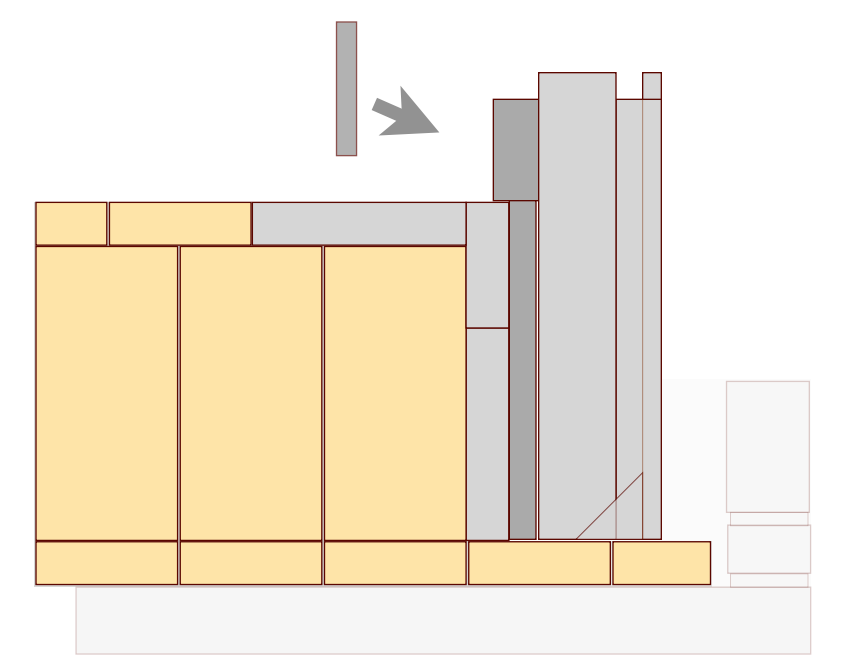

07. Glueing the riser's bottom part